

RETEVIS RT3, TYT MD 380 & CLONES

How to check and change Brandmeister Reflectors Default reflector UK 4400 (Scotland 4405)

To check the reflector you are on:

1. Press green button
2. Enter contacts
3. Enter manual contacts
4. Key in **5000**
5. Press PTT for 2 seconds
6. Voice will give current reflector

To Change reflectors:

1. Press green button
2. Enter contacts
3. Enter manual contacts
4. Key in number of **required reflector** e.g., 4406 for Wales
5. Press PTT for 2 seconds
6. Voice will give current reflector
7. Go back to Slot 2 TG9 and transmit on new reflector

To unlink

1. Press green button
2. Enter contacts
3. Enter manual contacts
4. Key in **4000**
5. Press PTT for 2 seconds
6. You should hear a voice announcement "Reflector Disconnected".

ACTIVE Reflectors in the UK.

4400 UK.

4401 UK Wide.

4402 UK DV4 talk.

4403 UK 3. 4404 Ireland.

4405 Scotland.

4406 Wales.

4407 UK 7.

4412 TG23520 North West